

# USER MANUAL

CENTRAL VACUUM SYSTEM



THIS MANUAL APPLIES TO:

**Husky flair**

EN

DOC-530 REV01



2000868

conformé à / conformed to ULSTD 1017

certifié / certified

CAN/CSA STD C22.2 No. 243-M91

# TABLE OF CONTENTS

- 1. IMPORTANT SAFETY INSTRUCTIONS..... 3
- 2. GENERAL GUIDELINES & REFERENCE ..... 4
  - GROUNDING REQUIREMENTS
  - SOME GENERAL GUIDELINES TO BE RESPECTED AT ALL TIMES
- 3. MODELS..... 5
- 4. INSTALLATION ..... 5
  - POWER UNIT
- 5. THE HOSE HANDLE ..... 6
- 6. LOW VOLTAGE TECHNOLOGY SYSTEM ..... 6
  - INSTALLATION
  - OPERATING INSTRUCTIONS
- 7. SYSTEM OPERATING INSTRUCTIONS..... 6
- 8. SYSTEM MAINTENANCE ..... 6
  - MOTOR
  - HANDLE
- 9. TROUBLESHOOTING ..... 8
  - GENERAL
  - LED INTERPRETATION GUIDE
- 10. CONTACT..... 8
- 11. RECYCLING INSTRUCTIONS ..... 8




# 1. IMPORTANT SAFETY INSTRUCTIONS

## READ ALL INSTRUCTIONS BEFORE USING THIS CENTRAL VACUUM SYSTEM

When using an electrical appliance, basic precautions should always be followed.

### **WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:**

- Unplug and disconnect the power unit from the electrical outlet before servicing or maintenance.
- Do not install outdoors and do not use on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended accessories.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service centre.
- Do not pull or carry by power cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Check inlet openings for small objects that may not have been vacuumed in order to keep openings clear of air flow reducing factors.
- Keep power cord away from heated surfaces.
- Do not unplug by pulling on power cord. To unplug, grasp the plug, not the cord.
- Do not handle system or accessories with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

 **IMPORTANT: DO NOT vacuum gypsum dust, flour, mud or any equivalent substances because they cake onto the filter and obstruct the filtration system. This can cause the motor to overheat and hinder the proper functioning of the unit. The power unit must always have the permanent filter installed.**

- Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
- Connect to a properly grounded outlet only. See grounding requirements in section 2.
- Do not exhaust into a wall, a ceiling or concealed space of a building or structure, use appropriate installation to exhaust outside the residence.
- Make sure that the air exhaust is never obstructed.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not place or store anything on top or around of the power unit, overheating of motor could occur.

## SAVE THESE INSTRUCTIONS

INTENDED FOR HOUSEHOLD USE ONLY

## 2. GENERAL GUIDELINES & REFERENCE

### GROUNDING REQUIREMENTS

These appliances must be grounded. If they should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. These appliances have a power cord of 5.4ft / 1.65m in length and are equipped with a grounding conductor and grounding plug. The plug must always be inserted directly into an electrical outlet that is properly installed and grounded in accordance with all local codes and regulations.

#### DO NOT USE AN EXTENSION CORD.



#### **WARNING:**

**Improper connection of the equipment grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance – if it will not fit the outlet, have a proper outlet installed by a qualified electrician.**

**This appliance is for use on a nominal circuit of 15A at 110-120 Volts C. A., 50/60 Hz. The unit has a grounding attachment plug. Make sure that the appliance is connected to an outlet having the same configuration as the plug. No adapter should be used with this appliance. The power unit should be connected to an independent circuit breaker.**

### SOME GENERAL GUIDELINES TO BE RESPECTED AT ALL TIMES

1. The power unit must be installed in a ventilated area away from any heat source;
2. The Husky central vacuum system must be used only on dry surfaces. At no time should the system be used to draw up liquids nor should it be used to vacuum wet carpets or floors.
3. It is mandatory that the filtration grid be equipped with its permanent filter at all times when the system is in use;
4. The motor housing must never be obstructed in any way to avoid overheating or damaging;
5. DO NOT vacuum gypsum dust, flour, mud, or any sludgy materials as they cake onto the filter and obstruct the filtration system resulting in the over-heating of the motor and thus failure of the power unit to function properly;
6. Do not attempt to shorten or modify the electrical power cord;
7. As a security measure, unplug the electrical power cord before proceeding with any maintenance;
8. In order for the warranty to be valid, only a Husky authorised service personnel may carry out the necessary repairs or maintenance on the motor;
9. The warranty will be void if non-recommended products such as filters or any other after-sale parts as carbon brushes and motors are used to repair the unit. Husky recommends strongly to use only Husky certified filters and replacement parts.
10. Appliance must be so positioned that the plug is always easily accessible.
11. Pertaining to an electrified inlet valve (intended for the connection of a current-carrying hose/motorized nozzle combination):
  - Connect only a current-carrying hose to this wall valve;
  - Do not install a wall valve outdoors;
  - Do not use with a damaged hose. Return hose to a service centre;



#### **IMPORTANT**

**Husky is not responsible for damages resulting from improper use. The warranty does not cover damage resulting from misuse or problems resulting from installation that does not conform to specifications, or any functional alterations and / or physical changes to the power unit. Improper or non-recommended installation of the system and / or power unit done against predefined principles of the user manual is also considered misuse.**

**All conditions and restrictions are set forth in the Nuera limited warranty, the user manual and the system installation guide. To optimize the performance and life of your Husky power unit, it is important to do regular maintenance and cleaning of the filter according to the guidelines listed in this user manual.**

### 3. MODELS

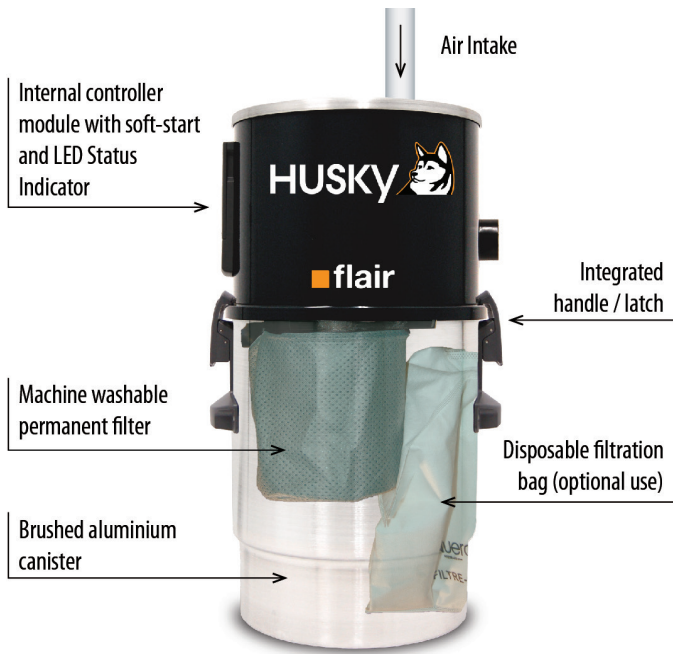


Fig. 1 Shown: flex, available in low voltage and basic wireless technologies



#### NOTE

» APPLICABLE TO ALL POWER UNITS: in order to avoid overheating, we recommend 12in / 30cm clearance all around the power unit.

### 4. INSTALLATION

#### POWER UNIT

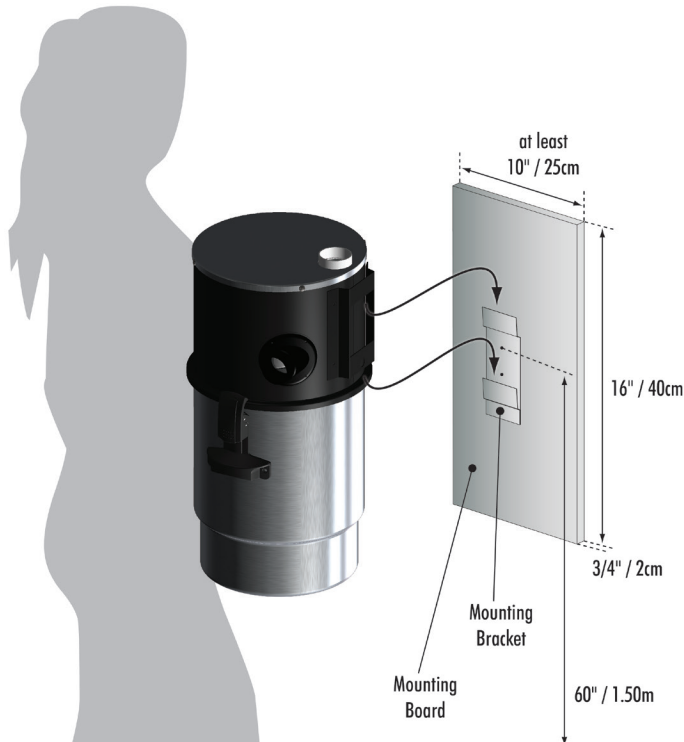


Fig. 2 Mounting the flair on the wall.

The power unit must be installed in a ventilated area, easily accessible and away from any heat source. It should also be close to an accessible electrical outlet.

1. Determine the location of the power unit on the wall; we recommend that the power unit be fastened at 60" / 1,5m from the ground in order for the dust canister to be readily accessible; allow 12" / 30cm clearance on all sides of the power unit. When possible, it is advisable to

install the power unit on a concrete wall in order to minimise the vibrations;

#### 2. Gypsum wall:

- Prepare the wall by installing a plywood mounting board (not provided) 16" / 40cm high x 3/4" / 2cm thick and wide enough to be screwed to at least 2 studs;
- Fasten the mounting bracket to the mounting board with the provided screws;

#### 3. Concrete wall:

- Drill the holes with a concrete drill bit;
- Insert the provided wall anchors into the drilled holes;
- install the mounting bracket with the provided screws into the anchors;



#### NOTE

» You can still install a plywood mounting (16" / 40cm x 10" / 25cm x 3/4" / 2cm) board if desired;  
 » You can use provided screws to fix mounting board on the wall, but cannot use them for installing the mounting bracket on the mounting board because of their length. You need to use shorter screws (not provided).



#### IMPORTANT

**Always use the right type of screws for the surface you are working with (wood, concrete, metal...)**

4. Insert the power unit bracket into the mounting bracket (Fig. 2).
5. Insert the PVC pipe into the air intake coupling; **DO NOT GLUE!**
6. Connect the controller module as explained in section 6;
7. Connect the power unit directly into an electrical outlet.

## 5. THE HOSE HANDLE



At Husky, we understand that your cleaning experience with a central vacuum system begins above all with the use of the flexible hose and accessories. This is why we offer products above market standards, on top of having incomparable advantages like the best warranty in the industry.

Your Husky flexible hose comes with a uniquely designed ergonomic handle, which makes its use

pleasant and worry-free. The BIP low voltage technology handle's quality, durability and solid design is of made first quality materials with a rocker on/off switch.

The top-of-the-line finish of your Husky flexible hose is perfectly harmonized with a series of accessories chosen by Husky to make a perfect cleaning kit. The performance, simplicity and durability are the three principles which led to the development of your Husky accessory kit. We are convinced that your cleaning experience will be improved by it.

## 6. LOW VOLTAGE TECHNOLOGY SYSTEM

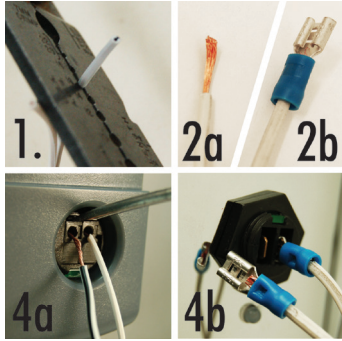


Fig.3

### INSTALLATION

Before connecting the low voltage wires, make sure that the power unit is disconnected from the electrical outlet.

1. First, strip the low voltage wires approximately 3/8in / 10mm.
2. Refer to Fig.3 for visual aid:
  - 2a: The power unit is an EZ connector-type, leave the wires stripped.
  - 2b: The power unit is a PIN connector-type,

you must crimp the connectors onto the wires in order to hook-up the system.

3. Insert the low voltage wires into the power unit's low voltage terminal. Slightly pull on the low voltage wires to verify that they are properly fastened to the terminal.
4. To remove the wires:
  - 4a (EZ connector): Gently press the tabs above each terminal with a screwdriver and pull the wires out.
  - 4b (PIN connector): gently pull the connector out of the socket.

### OPERATING INSTRUCTIONS

Use the rocket switch on the handle to turn the power unit on or off.

## 7. SYSTEM OPERATING INSTRUCTIONS

Your new system is ready to be used, here are some simple guidelines to follow when using your power unit:

- Insert the flexible hose in one of the wall or floor vacuum inlets installed in your home;



### NOTE

» Regarding the low voltage system: All inlets are equipped with 24V low voltage conductors (two small contacts on the inside of the inlet). As soon as the metal end of the hose comes in contact

with these conductors, the power unit is turned on. The 24V electric wire, which runs alongside the pipes from the power unit to the system inlets, carries the low voltage current, which allows the power unit to be used safely.

- If you use a hose fitted with a remote switch on the handle, insert the hose end in the vacuum inlet and use the interrupter on the hose's handle to turn the power unit on or off;
- You can control the power unit through the regular hose switch to turn the power unit on and off.

## 8. SYSTEM MAINTENANCE

### FILTRATION SYSTEM

In order to maintain good air quality in your home, the power unit is equipped with a filtration system. It consists of a permanent filter and an optional disposable filtration bag. The filter separates dust from the air. The filters refine the filtration process retaining extra fine dust particles, as minute as 0.1 micron (the diameter of one hair is approximately 60 microns).

### THE PERMANENT FILTER



Hand wash or  
Machine wash  
Normal cycle  
(40°C/105°F)

Tumble dry  
Low

Do Not  
Bleach

Do Not  
Dryclean

Do Not Iron

Husky's filtration system will maintain its high performance as long as it is well looked after. The permanent filter can be machine-washed and tumble dried. A natural protection (GREEN) against odor-causing bacteria. SILPURE exploits the natural power of silver in stopping the growth of a wide range of bacteria. It is recommended that the dust canister be emptied every three (3) months or more often depending on the use you make of your system.



### IMPORTANT

**DO NOT** vacuum gypsum dust, flour, mud, or any sludgy materials as they cake onto the filter and obstruct the filtration system resulting in the over-heating of the motor and thus failure of the power unit to function properly;

If you are not using a disposable filtration bag in addition to the permanent filter,

**empty the dust canister regularly to ensure a longer lasting life of the motor.**

**If you are using the disposable filtration bag, it should be checked / changed as often as you would empty the dust canister.**

While emptying the power unit's dust canister, the permanent filter should also be cleaned:

1. Unlatch the dust canister;
2. Wrap a plastic / paper bag around the filter and gently pat the filter to dislodge any loose dust into the bag.
3. Empty the dust canister into a garbage bag.



### NOTE

» We recommend that the permanent filter be deep-cleaned once a year;

- a. **Remove the dust from the filter by gently patting it into a bag as mentioned above;**
- b. **Remove the filter by pulling it down;**
- c. **Drop it into the washer.**
- d. **Set the washer to a normal wash cycle (warm or cold water) then, spin dry (regular cycle) for 10 minutes;**
- e. **Before replacing the filter, clean the inside of the filtration cage;**



### IMPORTANT

**Do not turn filter inside out. It must be replaced over the cage on the same fabric side as initially mounted in the factory.**

**It is very important that the filter be slipped over the metal rim located at the top of the cage. In order to prevent any dust infiltration into the motor, the cage must be completely covered by the filter;**

- f. **Clip the dust canister back on the casing.**



## THE DISPOSABLE FILTRATION BAG

In order to maximize your system's filtration capabilities, every Husky power unit comes with a disposable filter bag. See below instructions on replacing the disposable filtration bag depending on the system being used:

The disposable filtration bag should be changed at an interval of 3 months to ensure proper functioning of the power unit.

To change the filtration bag, please proceed as follows:

1. Unlatch the dust canister;
2. Remove the disposable bag from the elbow attachment by gently pulling on both sides of the cardboard cuff;
3. Dispose of the used bag;
4. Slip the new disposable filtration bag onto the elbow fixture by gently pressing on both sides of the cardboard cuff until it reaches the stop notch on the elbow.



### IMPORTANT

**IMPORTANT: The warranty will be void if non-recommended filters are used to repair the unit. Husky recommends strongly to use only Husky certified filters**

## MOTOR

All units are equipped with a soft-start controller module that is programmed to automatically stop the unit after 500 working hours; the power unit should be serviced by a qualified technician. A mini breaker (power cut-off) directly connected to the module protects the motor against an overload and prevents overheating.

The low voltage technology system communicates the system status through the LED situated on the power unit accompanied by a color interpretation guide (Fig. 4).

## HANDLE

To keep the hose handle clean, wipe with a moist towel to avoid buildup.



# 9. TROUBLESHOOTING








## GENERAL

Failure of the power unit could be caused by:




- Inadequate power level (voltage / amperage) (ensure that power level complies with the power unit's electrical requirements);
- Malfunction of the motor or controller module.

Simple checks can often help you find out why your power unit is inoperative. We invite you to verify the following before calling a service technician.

SITUATION	VERIFICATION
NO POWER	Check that the power unit's electrical cord is plugged directly into a power outlet;
	The power unit is equipped with a mini breaker (button on the side of the motor housing) which protects the motor against an overload. To reset the mini breaker, simply push the button. If the power goes off one more time, call a service centre near you;
	Using a screwdriver fitted with a rubber handle, touch both pins of the low voltage terminals (short circuit the 2 pins) on the side of the motor housing. If the power unit starts, the problem lies with the wireless system or the low voltage wiring (installed along the piping).
	You should then verify if the 24 Volts circuit is adequately connected by checking each inlet. Open the inlet cover, touch the small contacts with the head of a pair of metal pliers with rubber handles. This will establish power and start the motor. Repeat for each vacuum inlet;
	 <b>NOTE</b> » If all vacuum inlets are functional and your flexible hose is a low voltage technology handle, then there may be a defect in the cut-off switch of the hose or the hose itself;
DECREASED SUCTION	Check the breaker on your electric circuit panel;
	The flexible hose may be blocked. If you cannot unblock it, try inserting the opposite end of the hose into the wall inlet; touch the contacts which are located on the inside of the inlet with the hose wand in order to start the power unit;
	 <b>NOTE</b> » Frame the inlet with your hands or a large enough piece of cloth (such as a towel) to ensure the maximum suction to unblock the hose;
	Check whether the dust canister / disposable filtration bag / permanent filter needs to be emptied / cleaned;
	Verify that the canister is clipped properly to the motor housing and that the gasket, which fits around it, is in good condition;
	Make sure the gasket on the cover of each inlet fits properly;
	If the pipes are visible in certain areas: check if the fittings are well glued and that there are no air leaks;
	If the pipes should be blocked behind the walls, it is possible to determine where the blockage is located by starting from the furthest inlet from the central vacuum. Insert a tissue paper and check to see if the tissue paper reaches the dust canister. Repeat the same for each inlet.

SIGNIFICATION	NIVEAU LEVEL	DEL LED	MEANING
Brancher le cordon d'alimentation à une prise électrique.	0		Plug power cord to electrical outlet.
Le cordon d'alimentation vient d'être branché à une prise électrique.	1		Power cord has just been connected to electrical outlet.
Système opérationnel.	2		System operational.
Vidange/nettoyage requis. Remise à zéro: Garder le bouton enfoncé 5 secondes.	3		Cleaning/emptying required. Reset: hold button pressed for 5 seconds.
Vidange/nettoyage requis. Remise à zéro non requise : l'unité motrice reviendra au niveau 2.	4		Cleaning/emptying required. No reset required: Power unit will return to level 2.
Planifier un appel de service.	5		Schedule service.
Service requis.	6		Service required.

Constante  Solid	Clignotement Lent  Blinks Slowly	Clignotement Rapide  Blinks Fast
---	---	---

**Fig.4** LED interpretation guide

## LED INTERPRETATION GUIDE

All Husky power units with internal controller module, come with an explicative sticker inside the casing covering the module or next to the controller module.

## 10. CONTACT

NUERA AIR INC. – Customer Service  
3695 Desserte des Laurentides (A-15) E  
Laval, QC H7L 3H7 CANADA  
[www.huskyvac.com](http://www.huskyvac.com)

Tel. : 450-622-9000  
Fax : 450-622-7712  
Toll Free : 1-800-361-3965  
[info@nuera-air.com](mailto:info@nuera-air.com)

## 11. RECYCLING INSTRUCTIONS

Old vacuum units contain valuable materials that can be recycled.

**DO NOT** dispose of such units with the normal domestic waste but rather by way of appropriate collecting points.